1、被控端电脑下载 TightVNC 下载地址: download.idste.org ------01.通用调试软件 ------TightVNC19646.rar 注: iDste 内置电脑出厂自带 TightVNC

2、被控端电脑安装 TightVNC

①打开下载的压缩包,根据电脑系统类型选择 64 位或者 32 位



T			
🛃 TightVNC Setup		())	
Choose Setup Type			
Choose the setup type that best suits your ne	eeds		B
Tunical			
Installs the most common program	features Recommend	led for most	licorc
Instans the most common program	redures. Recomment	ieu ioi mosc	users.
Custom			
Allows users to choose which prog will be installed. Recommended fo	ram features will be in r advanced users.	stalled and v	where they
Complete			
All program features will be install	ed. Requires the most	disk space.	
	Back	<u>N</u> ext	Cancel
5			
Tight//NC Cotup			~
			^
Select Additional Tasks			
Which additional tasks should be performed?			S
Select additional tasks you would like Setup to Next.	perform while installing	TightVNC 2	8.8.0, then click
File associations:			
Associate .vnc files with TightVNC Viewer			
TightVNC Service configuration:			
Register TightVNC Server as a system se	rvice (recommended)		
Configure system to allow services simula	ate Ctrl-Alt-Del		
Windows Firewall configuration:			
Add exception for TightVNC to Windows I	Firewall		
	Back	Next	Cancel
(6)			
🛃 TightVNC Setup		8 <u>0 </u>	
Ready to install TightVNC			\odot
Click Install to begin the installation. Click Ba	ck to review or change	any of your	installation
settings. Click Cancel to exit the wizard.			
	Contraction of the second seco		
	Back Inst	all	Cancel

⑦设置远程控制密码和管理密码,点击 OK 完成安装

TightVNC Server: Set Passwords

<u> </u>	
Do not change	
Do not use password	protection (DANGEROUS!)
Require password-ba	sed authentication (make sure this box is always check
Enter password:	••••
Confirm	
~	
◯ Do not change ◯ Do not use password	protection
Do not change Do not use password Protect control interfa	protection ace with an administrative password
Do not change Do not use password Protect control interfa Enter password:	protection ace with an administrative password
Do not change Do not use password Protect control interfa Enter password: Confirm	protection ace with an administrative password

3、服务器配置

①选中电脑对应的中控设备,点击右侧的【设备配置】图标

	图表模式	自日志	直 删除	◎ 监控增	こ 刷新	● 批量控制 中控 キ	5点		在线:5/6	开机: 0	关机:5	禁用:
全部												
	设备名	称 \$				基本状态	设备状态	物联状态			操	作
	=	登挂式融合的 位置: TM-0 ID: 280189	终端-TM02A 2A 7229			� 192.168.31.88 砷 关机 ▌温度: 18.6℃ 湿度: 45.5%	■ 电脑 弊投影 10 广播	 ☆ 空调 ↔ 黑板灯 ↔ 照明灯 	四窗帘		0	2
	#	壁挂式视频 位置: BC-03 ID: 480000	终端-BC03 } 0335			% 192.168.31.48 錘 关机	韓 投影 ⊕ 广播				0	ත

②在【远程控制】中填写被控端电脑 IP 地址,端口号固定 5900,控制密码需要与安装 TightVNC 时填写的密码一致

设备配置										\times
系统	视频	音频	物联	二路投影	高级	VLAN	监控	录播配置	远程控制	_
0	远程控制(请在电脑端	又支持VNC协 胺装 <u>Tight VI</u>	议 <u>NC</u> 并正确配	置以下内容。						
IP地址		192.168	.1.11							
端口号		5900								
控制密码	3	*****								

取消	保存
	a second second